

TF570 SLI A2+ BIOS Manual

BIOS Setup	1
1 Main Menu	3
2 Standard CMOS Features	7
3 Advanced BIOS Features	9
4 Advanced Chipset Features	16
5 Integrated Peripherals	18
6 Power Management Setup	24
7 PnP/PCI Configurations	28
8 PC Health Status	30
9 OverClock Navigator Engine	33
10 CMOS Reload Program (C.R.P.)	41

TF570 SLI A2+

BIOS Setup

Introduction

The purpose of this manual is to describe the settings in the Phoenix-Award™ BIOS Setup program on this motherboard. The Setup program allows users to modify the basic system configuration and save these settings to CMOS RAM. The power of CMOS RAM is supplied by a battery so that it retains the Setup information when the power is turned off.

Basic Input-Output System (BIOS) determines what a computer can do without accessing programs from a disk. This system controls most of the input and output devices such as keyboard, mouse, serial ports and disk drives. BIOS activates at the first stage of the booting process, loading and executing the operating system. Some additional features, such as virus and password protection or chipset fine-tuning options are also included in BIOS.

The rest of this manual will to guide you through the options and settings in BIOS Setup.

Plug and Play Support

This PHOENIX-AWARD BIOS supports the Plug and Play Version 1.0A specification.

EPA Green PC Support

This PHOENIX-AWARD BIOS supports Version 1.03 of the EPA Green PC specification.

APM Support

This PHOENIX-AWARD BIOS supports Version 1.1&1.2 of the Advanced Power Management (APM) specification. Power management features are implemented via the System Management Interrupt (SMI). Sleep and Suspend power management modes are supported. Power to the hard disk drives and video monitors can also be managed by this PHOENIX-AWARD BIOS.

TF570 SLI A2+

ACPI Support

Phoenix-Award ACPI BIOS support Version 1.0b of Advanced Configuration and Power interface specification (ACPI). It provides ASL code for power management and device configuration capabilities as defined in the ACPI specification, developed by Microsoft, Intel and Toshiba.

PCI Bus Support

This PHOENIX-AWARD BIOS also supports Version 2.3 of the Intel PCI (Peripheral Component Interconnect) local bus specification.

DRAM Support

DDR2 SDRAM (Double Data Rate Synchronous DRAM) is supported.

Supported CPUs

This PHOENIX-AWARD BIOS supports the AMD CPU.

Using Setup

Use the arrow keys to highlight items in most of the place, press <Enter> to select, use the <PgUp> and <PgDn> keys to change entries, press <F1> for help and press <Esc> to quit. The following table provides more detail about how to navigate in the Setup program by using the keyboard.

Keystroke	Function
Up arrow	Move to previous item
Down arrow	Move to next item
Left arrow	Move to the item on the left (menu bar)
Right arrow	Move to the item on the right (menu bar)
Move Enter	Move to the item you desired
PgUp key	Increase the numeric value or make changes
PgDn key	Decrease the numeric value or make changes
+ Key	Increase the numeric value or make changes
- Key	Decrease the numeric value or make changes
Esc key	Main Menu – Quit and not save changes into CMOS Status Page Setup Menu and Option Page Setup Menu – Exit Current page and return to Main Menu
F1 key	General help on Setup navigation keys
F5 key	Load previous values from CMOS
F7 key	Load the optimized defaults
F10 key	Save all the CMOS changes and exit

TF570 SLI A2+


1 Main Menu

Once you enter Phoenix-Award BIOS™ CMOS Setup Utility, the Main Menu will appear on the screen. The Main Menu allows you to select from several setup functions. Use the arrow keys to select among the items and press <Enter> to accept and enter the sub-menu.

!! WARNING !!

For better system performance, the BIOS firmware is being continuously updated. The BIOS information described in this manual (**Figure 1, 2, 3, 4, 5, 6, 7, 8, 9**) is for your reference only. The actual BIOS information and settings on board may be slightly different from this manual.

■ **Figure 1: Main Menu**

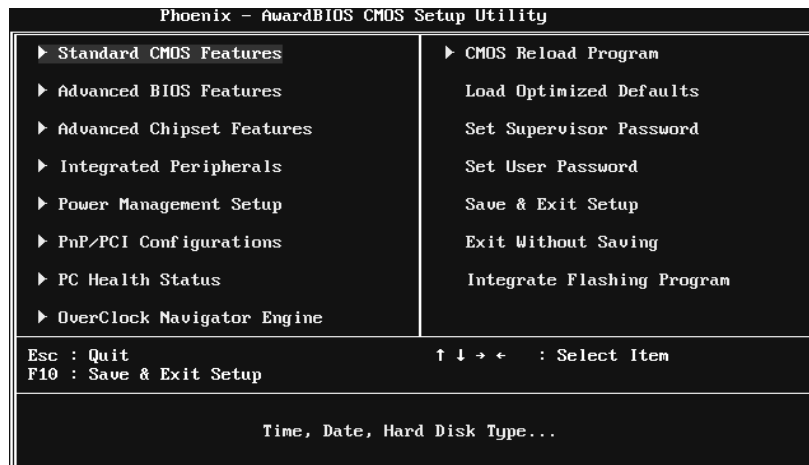

Standard CMOS Features

This submenu contains industry standard configurable options.

Advanced BIOS Features

This submenu allows you to configure advanced features of the BIOS.

TF570 SLI A2+

Advanced Chipset Features

This submenu allows you to configure special chipset features.

Integrated Peripherals

This submenu allows you to configure certain IDE hard drive options and Programmed Input/ Output features.

Power Management Setup

This submenu allows you to configure the power management features.

PnP/PCI Configurations

This submenu allows you to configure certain “Plug and Play” and PCI options.

PC Health Status

This submenu allows you to monitor the hardware of your system.

OverClock Navigator Engine

This submenu allows you to change CPU Vcore Voltage and CPU/PCI clock. (However, we suggest you to use the default setting. Changing the voltage and clock improperly may damage the CPU or M/B!)

CMOS Reload Program

The CMOS Reload Program (CRP) allows you to save different CMOS settings into BIOS-ROM.

Load Optimized Defaults

This selection allows you to reload the BIOS when problem occurs during system booting sequence. These configurations are factory settings optimized for this system. A confirmation message will be displayed before defaults are set.



Load Optimized Defaults (Y/N)? N

TF570 SLI A2+

Set Supervisor Password

Setting the supervisor password will prohibit everyone except the supervisor from making changes using the CMOS Setup Utility. You will be prompted with to enter a password.



Enter Password:

Set User Password

If the Supervisor Password is not set, then the User Password will function in the same way as the Supervisor Password. If the Supervisor Password is set and the User Password is set, the “User” will only be able to view configurations but will not be able to change them.



Enter Password:

Save & Exit Setup

Save all configuration changes to CMOS (memory) and exit setup. Confirmation message will be displayed before proceeding.



SAVE to CMOS and EXIT (Y/N)? Y

Exit Without Saving

Abandon all changes made during the current session and exit setup. Confirmation message will be displayed before proceeding.



Quit Without Saving (Y/N)? N

TF570 SLI A2+

Integrate Flashing Program

This is a very safe way to upgrade BIOS.

By pressing “Enter” key for three times, and the upgrading process will be completed easily.

A screenshot of a BIOS update utility prompt. The text "BIOS UPDATE UTILITY <Y/N>?" is displayed in a monospaced font, followed by a cursor icon. The prompt is enclosed in a rectangular box with a double border.


BIOS UPDATE UTILITY <Y/N>? 

TF570 SLI A2+

2 Standard CMOS Features

The items in Standard CMOS Setup Menu are divided into several categories. Each category includes no, one or more than one setup items. Use the arrow keys to highlight the item and then use the <PgUp> or <PgDn> keys to select the value you want in each item.

■ Figure 2: Standard CMOS Setup

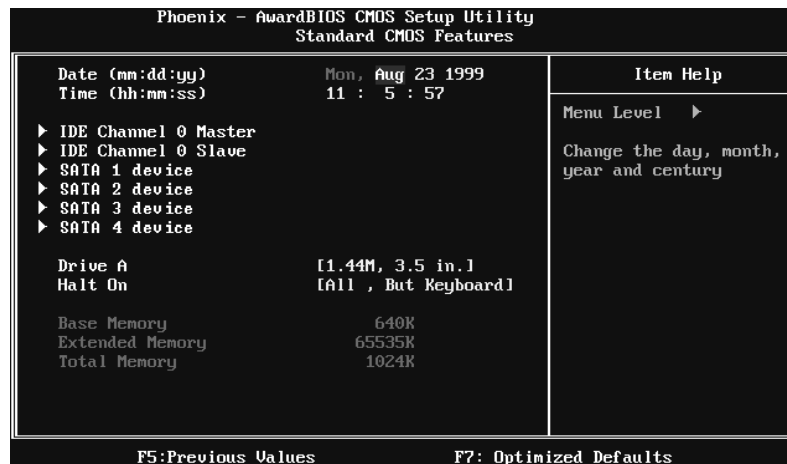

Main Menu Selections

This table shows the items and the available options on the Main Menu.

Item	Options	Description
Date	mm : dd : yy	Set the system date. Note that the 'Day' automatically changes when you set the date.
Time	hh : mm : ss	Set the system internal clock.
IDE Channel 0 Master/Slave	Options are in its sub menu.	Press <Enter> to enter the sub menu of detailed options
SATA 1/2/3/4 device	Options are in its sub menu.	Press <Enter> to enter the sub menu of detailed options.


TF570 SLI A2+

Item	Options	Description
Drive A	360K, 5.25 in 1.2M, 5.25 in 720K, 3.5 in 1.44M, 3.5 in 2.88M, 3.5 in None	Select the type of floppy disk drive installed in your system.
Halt On	All Errors No Errors All, but Keyboard All, but Diskette All, but Disk/ Key	Select the situation in which you want the BIOS to stop the POST process and notify you.
Base Memory	N/A	Displays the amount of conventional memory detected during boot up.
Extended Memory	N/A	Displays the amount of extended memory detected during boot up.
Total Memory	N/A	Displays the total memory available in the system.


TF570 SLI A2+

3Advanced BIOS Features

■ Figure 3: Advanced BIOS Setup

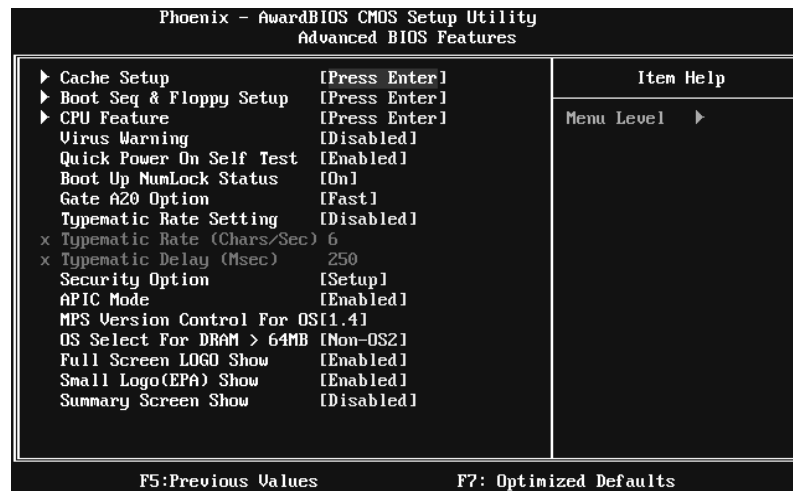

Cache Setup

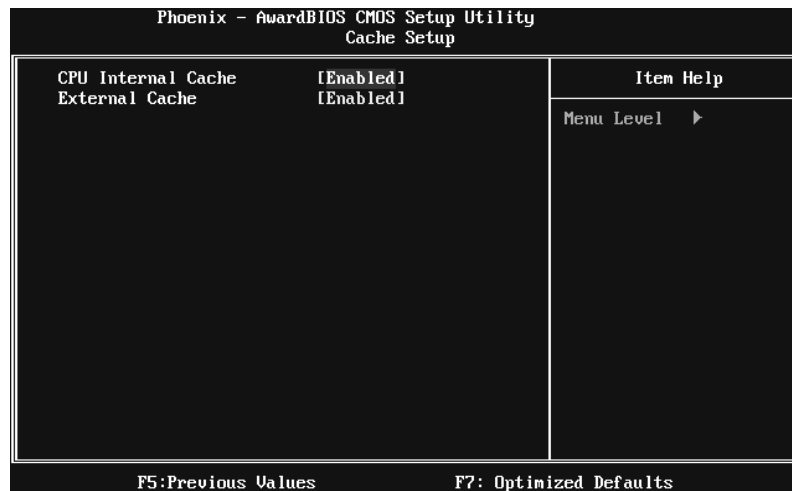

CPU Internal Cache

Enabled (default)	Enable cache.
--------------------------	---------------

Disabled	Disable cache.
----------	----------------

External Cache

Enabled (default)	Enable cache.
--------------------------	---------------

Disabled	Disable cache.
----------	----------------

Boot Seq & Floppy Setup

This item allows you to setup boot sequence & Floppy.

Phoenix - AwardBIOS CMOS Setup Utility	
Boot Seq & Floppy Setup	
▶ Removable Device Priority [Press Enter] ▶ Hard Disk Boot Priority [Press Enter] ▶ CD-ROM Boot Priority [Press Enter] First Boot Device [Removable] Second Boot Device [Hard Disk] Third Boot Device [CDROM] Boot Other Device [Enabled] Boot Up Floppy Seek [Enabled]	Item Help Menu Level ▶ Select Removable Boot Device Priority
F5: Previous Values	F7: Optimized Defaults

TF570 SLI A2+

Removable Device Priority

Select Removable Boot Device Priority.

Phoenix - AwardBIOS CMOS Setup Utility	
Removable Device Priority	
1. USB-ZIP0 : <input type="text"/>	Item Help
2. LS120	Menu Level ▶▶
3. USB-FDD1 :	Use <↑> or <↓> to
4. Floppy Disks	select a device , then
5. USB-FDD0 :	press <+> to move it
6. USB-ZIP1 :	up , or <-> to move it
7. ZIP100	down the list. Press
	<ESC> to exit this
	menu.
F5:Previous Values F6:Fail-Safe Defaults F7:Optimized Defaults	

The Choices: Floppy Disks, Zip100, USB-FDD0, USB-FDD1, USB-ZIP0, USB-ZIP1, LS120.

Hard Disk Boot Priority

The BIOS will attempt to arrange the Hard Disk boot sequence automatically.

You can change the Hard Disk booting sequence here.

Phoenix - AwardBIOS CMOS Setup Utility	
Hard Disk Boot Priority	
1. Pri.Master: <input type="text"/>	Item Help
2. Pri.Slave :	Menu Level ▶▶
3. Sec.Master:	Use <↑> or <↓> to
4. Sec.Slave :	select a device , then
5. USBHDD0 :	press <+> to move it
6. USBHDD1 :	up , or <-> to move it
7. USBHDD2 :	down the list. Press
8. Bootable Add-in Cards	<ESC> to exit this
	menu.
F5:Previous Values F6:Fail-Safe Defaults F7:Optimized Defaults	

The Choices: Pri. Master, Pri. Slave, Sec. Master, Sec. Slave, USB HDD0, USB HDD1, USB HDD2, and Bootable Add-in Cards.

TF570 SLI A2+

CD-ROM Boot Priority

Phoenix - AwardBIOS CMOS Setup Utility	
CD-ROM Boot Priority	
1. Pri.Master:	
2. USB-CDROM1:	
3. Sec.Slave :	
4. Pri.Slave :	
5. USB-CDROM0:	
6. Sec.Master:	
Item Help	
Menu Level ▶▶	
Use <↑> or <↓> to select a device , then press <+> to move it up , or <-> to move it down the list. Press <ESC> to exit this menu.	
F5:Previous Values F6:Fail-Safe Defaults F7:Optimized Defaults	

The Choices: Pri. Master, Pri. Slave, Sec. Master, Sec. Slave, USB-CDROM0, USB-CDROM 1.

First/Second/Third Boot Device

The BIOS will attempt to load the operating system in this order.

The Choices: Removable, Hard Disk, CDROM, Legacy LAN, Disabled.

Boot Other Device

When enabled, BIOS will try to load the operating system from other device when it failed to load from the three devices above.

The Choices: Enabled (default), Disabled


Boot Up Floppy Seek

When enabled, System will test the floppy drives to determine if they have 40 or 80 tracks during boot up. Disabling this option reduces the time it takes to boot-up.

The Choices: Enabled (default), Disabled.

TF570 SLI A2+

CPU Feature

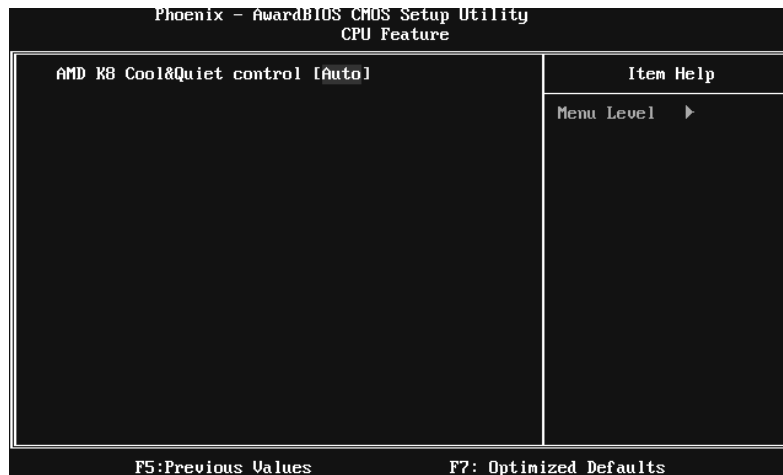

AMD K8 Cool&Quiet control

The item allows you select K8 Cool'n'Quiet control.

The Choices: Auto (default), Disabled.

Virus Warning

This option allows you to choose the VIRUS Warning feature that is used to protect the IDE Hard Disk boot sector. If this function is enabled and an attempt is made to write to the boot sector, BIOS will display a warning message on the screen and sound an alarm beep.

Disabled (default) Virus protection is disabled.

Enabled Virus protection is activated.

Quick Power On Self Test

Enabling this option will cause an abridged version of the Power On Self-Test (POST) to execute after you power up the computer.

Disabled Normal POST.

Enabled (default) Enable quick POST.

TF570 SLI A2+

Boot Up NumLock Status

Selects the NumLock State after the system switched on.

The Choices:

On (default)	Numpad is number keys.
Off	Numpad is arrow keys.

Gate A20 Option

Select if chipset or keyboard controller should control Gate A20.

Normal	A pin in the keyboard controller controls GateA20.
Fast (default)	Lets chipset control Gate A20.

Typematic Rate Setting

When a key is held down, the keystroke will repeat at a rate determined by the keyboard controller. When enabled, the typematic rate and typematic delay can be configured.

The Choices: **Disabled** (default), Enabled.

Typematic Rate (Chars/Sec)

Sets the rate at which a keystroke is repeated when you hold the key down.

The Choices: **6** (default), 8, 10, 12, 15, 20, 24, 30.

Typematic Delay (Msec)

Sets the delay time after the key is held down before it begins to repeat the keystroke.

The Choices: **250** (default), 500, 750, 1000.

Security Option

This option will enable only individuals with passwords to bring the system online and/or to use the CMOS Setup Utility.

System: A password is required for the system to boot and is also required to access the Setup Utility.

Setup (default): A password is required to access the Setup Utility only.

This will only apply if passwords are set from the Setup main menu.

TF570 SLI A2+

APIC MODE

Selecting Enabled enables APIC device mode reporting from the BIOS to the operating system.

The Choices: Enabled (default), Disabled.

MPS Version Control For OS

The BIOS supports version 1.1 and 1.4 of the Intel multiprocessor specification. Select version supported by the operation system running on this computer.

The Choices: 1.4 (default), 1.1.

OS Select For DRAM > 64MB

A choice other than Non-OS2 is only used for OS2 systems with memory exceeding 64MB.

The Choices: Non-OS2 (default), OS2.

Full Screen LOGO Show

This item allows you to enable/disable Full Screen LOGO Show.

The Choices: Enabled (default), Disabled.

Small Logo(EPA) Show

This item allows you to select whether the “Small Logo” shows. Enabled (default) “Small Logo” shows when system boots up. Disabled No “Small Logo” shows when system boots

The Choices: Enabled (default), Disabled.

Summary Screen Show

This item allows you to enable/disable the summary screen. Summary screen means system configuration and PCI device listing.


The Choices: Disabled (default), Enabled.

TF570 SLI A2+

4 Advanced Chipset Features

This submenu allows you to configure the specific features of the chipset installed on your system. This chipset manage bus speeds and access to system memory resources, such as DRAM. It also coordinates communications with the PCI bus. The default settings that came with your system have been optimized and therefore should not be changed unless you are suspicious that the settings have been changed incorrectly.

■ **Figure 4: Advanced Chipset Setup**

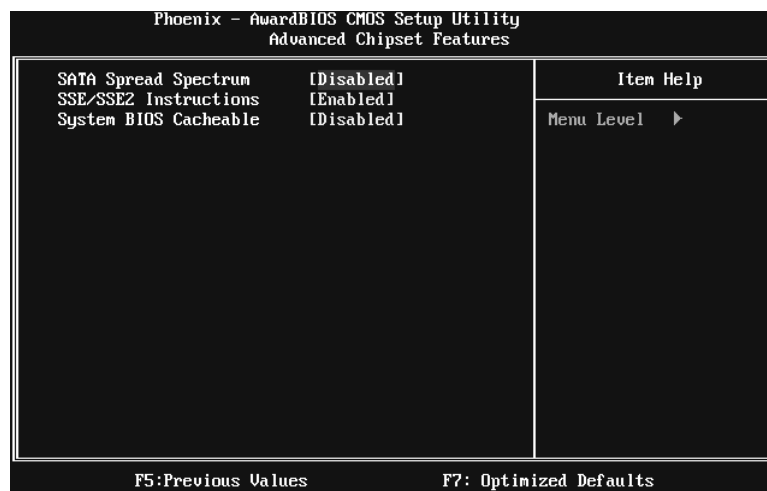

SATA Spread Spectrum

This item allows you to enable/disable the SATA Spread Spectrum function.

The Choices: Disabled (default), Enabled.

SSE/SSE2 Instructions

This item allows you to enable/disable SSE/SSE2 instruction.

The Choices: Enabled (default), Disabled.

TF570 SLI A2+

System BIOS Cacheable


Selecting the “Enabled” option allows caching of the system BIOS ROM at F0000h-FFFFFh, which is able to improve the system performance. However, any programs that attempts to write to this memory block will cause conflicts and result in system errors.

The Choices: **Disabled** (default), Enabled.

TF570 SLI A2+


5 Integrated Peripherals

■ Figure 5. Integrated Peripherals

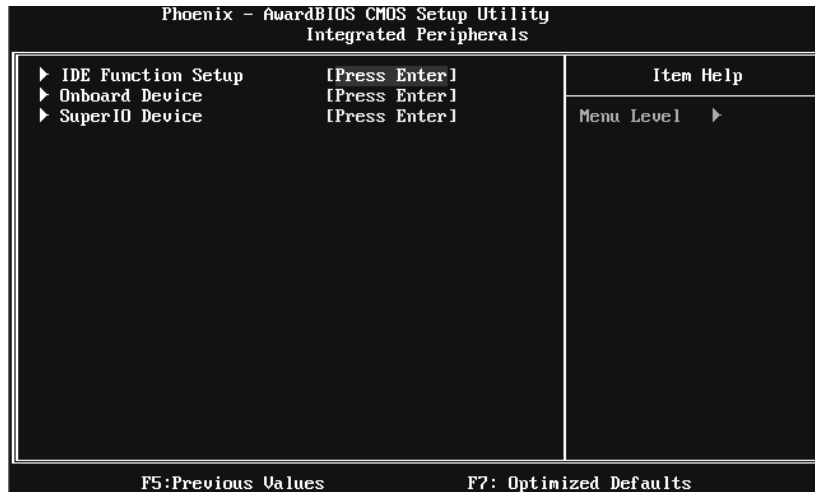

IDE Function Setup

Highlight the “Press Enter” label next to the “IDE Function Setup” label and press enter key will take you a submenu with the following options:

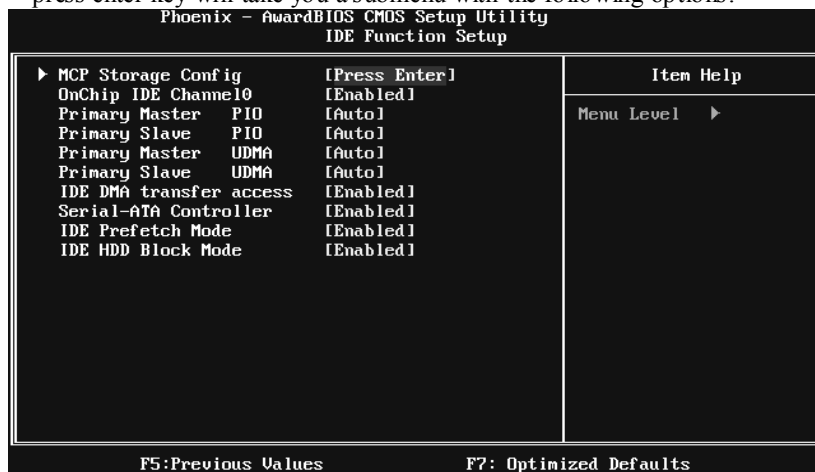

TF570 SLI A2+

MCP Storage Config

Phoenix - AwardBIOS CMOS Setup Utility		
MCP Storage Config		
SATA Operation Mode	[IDE]	Item Help
x SATA 1 RAID	Disabled	Menu Level >>
x SATA 2 RAID	Disabled	
x SATA 3 RAID	Disabled	
x SATA 4 RAID	Disabled	
F5: Previous Values		F7: Optimized Defaults

SATA Operation Mode

This option allows you to choose SATA function.

The Choices: IDE (default), RAID, AHCI.

SATA 1/2/3/4 RAID

This option allows you to enable or disable SATA Primary/Secondary RAID.

The Choices: Disabled (default), Enabled.

On-chip IDE Channel 0

The motherboard chipset contains a PCI IDE interface with support for two IDE channels. Select "Enabled" to activate the first and/or second IDE interface. Select "Disabled" to deactivate an interface if you are going to install a primary and/or secondary add-in IDE interface.

The Choices: Enabled (default), Disabled.

Primary Master/Slave PIO

The IDE PIO (Programmed Input / Output) fields let you set a PIO mode (0-4) for each of the IDE devices that the onboard IDE interface supports. Modes 0 to 4 will increase performance progressively. In Auto mode, the system automatically determines the best mode for each device.

The Choices: Auto (default), Mode0, Mode1, Mode2, Mode3, Mode4.

TF570 SLI A2+

Primary Master/Slave UDMA

Ultra DMA function can be implemented if it is supported by the IDE hard drives in your system. As well, your operating environment requires a DMA driver (Windows 95 or OSR2 may need a third party IDE bus master driver). If your hard drive and your system software both support Ultra DMA, select Auto to enable BIOS support.

The Choices: Auto (default), Disabled.

IDE DMA Transfer Access

This item allows you to enable or disable the IDE DMA transfer access.

The Choices: Enabled (default), Disabled.

Serial-ATA Controller

The Choices: Enabled (default), Disabled.

IDE Prefetch Mode

The “onboard” IDE drive interfaces supports IDE prefetch function for faster drive access. If the interface on your drive does not support prefetching, or if you install a primary and/or secondary add-in IDE interface, set this option to “Disabled”.

The Choices: Enabled (default), Disabled.

IDE HDD Block Mode

Block mode is also called block transfer, multiple commands, or multiple sectors read / write. If your IDE hard drive supports block mode (most new drives do), select Enabled for automatic detection of the optimal number of block mode (most new drives do), select Enabled for automatic detection of the optimal number of block read / write per sector where the drive can support.

The Choices: Enabled (default), Disabled.

TF570 SLI A2+

Onboard Device

Highlight the “Press Enter” label next to the “Onboard Device” label and press the enter key will take you a submenu with the following options:

Phoenix - AwardBIOS CMOS Setup Utility		
Onboard Device		
OnChip USB	[V1.1+V2.0]	Item Help
USB Memory Type	[Shadow]	Menu Level ▶
USB Keyboard Support	[Disabled]	
USB Mouse Support	[Disabled]	
USB Storage Support	[Enabled]	
HD Audio	[Auto]	
Onboard LAN	[Enabled]	
Onboard Lan Boot ROM	[Disabled]	
F5: Previous Values		F7: Optimized Defaults

OnChip USB

This option should be enabled if your system has a USB installed on the system board. You may need to disable this feature if you add a higher performance controller.

The Choices: V1.1+V2.0 (default), Disabled, V1.1

USB Memory Type

The Choices: SHADOW (default), Base Memory(640K).

USB Keyboard Support

This item allows you to enable or disable the USB Keyboard Legacy Support.

Enabled Enable USB Keyboard Support.

Disabled (default) Disable USB Keyboard Support.

USB Mouse Support

This item allows you to enable or disable the USB Mouse Legacy Support.

Enabled Enable USB Mouse Support.

Disabled (default) Disable USB Mouse Support.

TF570 SLI A2+

USB Storage Support

This item allows you to enable or disable the USB storage device Legacy Support.

Enabled (default) USB storage Support.

Disabled Disable USB storage Support.

HD Audio

The Choices: Auto (default), Disabled.

Onboard LAN

This option allows you to control the onboard LAN.

The Choices: **Enabled** (default), Disabled.

Onboard LAN Boot ROM

This item allows you to enable or disable the Onboard LAN Boot ROM.

The Choices: **Disabled** (default), Enabled.

SuperIO Device

Press Enter to configure the Onboard I/O Address.

Phoenix - AwardBIOS CMOS Setup Utility		
SuperIO Device		
Onboard FDC Controller	[Enabled]	Item Help
Onboard Serial Port 1	[3F8/IRQ4]	
Onboard Parallel Port	[378/IRQ7]	Menu Level ▶
Parallel Port Mode	[SPP]	
ECP Mode Use DMA	[3]	
F5: Previous Values		F7: Optimized Defaults

TF570 SLI A2+

Onboard FDC Controller

Select enabled if your system has a floppy disk controller (FDC) installed on the system board and you wish to use it. If you installed another FDC or the system uses no floppy drive, select disabled in this field.

The Choices: Enabled (default), Disabled.

Onboard Serial Port 1

Select an address and corresponding interrupt for the first and second serial ports.

The Choices: 3F8/IRQ4 (default), Disabled, 2F8/IRQ3, 3E8/IRQ4, 2E8/IRQ3, Auto.

Onboard Parallel Port

This item allows you to determine access onboard parallel port controller with which I/O Address.

The Choices: 378/IRQ7 (default), 278/IRQ5, 3BC/IRQ7, Disabled.

Parallel Port Mode

This item allows you to determine how the parallel port should function. The default value is SPP.

The Choices:

SPP (default)	Using Parallel port as Standard Printer Port.
EPP	Using Parallel Port as Enhanced Parallel Port.
ECP	Using Parallel port as Extended Capabilities Port.
ECP+EPP	Using Parallel port as ECP & EPP mode.

ECP Mode Use DMA

Select a DMA Channel for the port.


The Choices: 3 (default), 1.

TF570 SLI A2+

6 Power Management Setup

The Power Management Setup Menu allows you to configure your system to utilize energy conservation and power up/power down features.

■ Figure 6. Power Management Setup

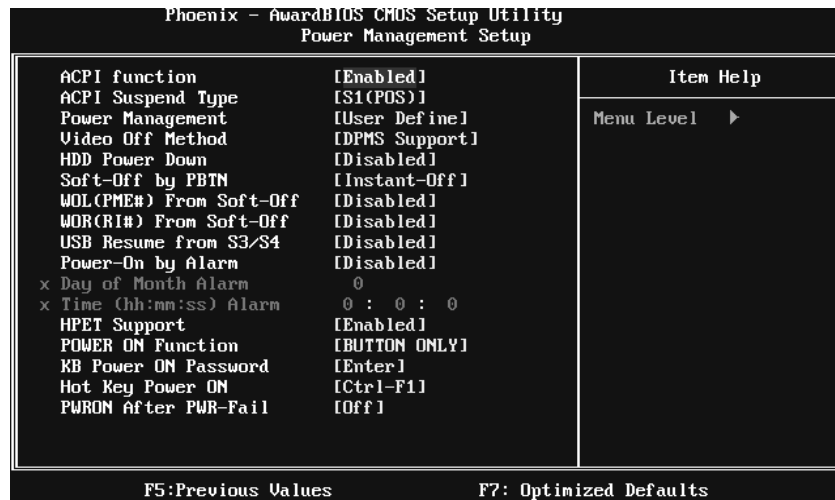

ACPI Function

This item displays the status of the Advanced Configuration and Power Management (ACPI).

The Choices: Enabled (default), Disabled.

ACPI Suspend Type

The item allows you to select the suspend type under the ACPI operating system.

The Choices: **S1 (POS)** (default) Power on Suspend
 S3 (STR) Suspend to RAM
 S1 & S3 POS+STR

TF570 SLI A2+

Power Management

This category allows you to select the power saving method and is directly related to the following modes:

1. HDD Power Down.
2. Suspend Mode.

There are three options of Power Management, three of which have fixed mode settings

Min. Power Saving

Minimum power management.

Suspend Mode = 1 hr.

HDD Power Down = 15 min

Max. Power Saving

Maximum power management only available for s1 CPU's.

Suspend Mode = 1 min.

HDD Power Down = 1 min.

User Define (default)

Allow you to set each option individually.

When you choose user define, you can adjust each of the item from 1 min. to 1 hr. except for HDD Power Down which ranges from 1 min. to 15 min.

Video Off Method

This option determines the manner when the monitor goes blank.

V/H SYNC+Blank

This selection will cause the system to turn off the vertical and horizontal synchronization ports and write blanks to the video buffer.

Blank Screen

This option only writes blanks to the video buffer.

DPMS Support (default)

Initial display power management signaling.

HDD Power Down

When enabled, the hard-disk drives will power down after a set time of system inactivity. All other devices remain active.

The Choices: Disabled (default), 1 Min, 2 Min, 3 Min, 4 Min, 5 Min, 6 Min, 7 Min, 8 Min, 9 Min, 10 Min, 11 Min, 12 Min, 13 Min, 14 Min, 15Min.

TF570 SLI A2+

Soft-Off by PBTN

This item determines the behavior of system power button. Instant off turn off the power immediately, and Delay 4 Sec. will require you to press and hold the power button for 4 seconds to cut off the system power.

The Choices: Delay 4 Sec, **Instant-Off** (default).

WOL(PME#)/ From Soft-Off

This item allows you to enable or disable Wake On LAN from Soft-Off function.

The Choices: **Disabled** (default), Enabled.

WOR(RI#) From Soft-Off

This item allows you to enable or disable Wake On Ring from Soft-Off function.

The Choices: **Disabled** (default), Enabled.

USB Resume From S3/S4

This item allows you to enable or disabled the USB resume from S3/S4 function.

The Choices: **Disabled** (default), Enabled.

Power-On by Alarm

This function is for setting date and time for your computer to boot up. When enabled, you can choose the date and time to boot up the system.

The Choices: **Disabled** (default), Enabled.

Date (of Month) Alarm

You can choose which month the system will boot up.

Time (hh:mm:ss) Alarm

You can choose the system boot up time, input hour, minute and second to specify.

Note: If you have change the setting, you must let the system boot up until it goes to the operating system, before this function will work.

TF570 SLI A2+

HPET Support

This option allows you to disabled or enables the High Precision Event Timer.
The Choices: **Enabled** (default), Disabled.

POWER ON Function

This item allows you to choose the power on method.
The Choices: **Button Only**(default), Password, Hot Key, Mouse Move/Click, Mouse Double Click, Any Key, Keyboard 98.

KB Power ON Password

Input password and press Enter to set the Keyboard power on password.

Hot Key Power ON

Choose the Hot Key combination to boot up the system.
The Choices: **Ctrl-F1**(default), Ctrl-F2, Ctrl-F3, Ctrl-F4, Ctrl-F5, Ctrl-F6, Ctrl-F7, Ctrl-F8, Ctrl-F9, Ctrl-F10, Ctrl-F11, and Ctrl-F12.

PWRON After PWR-Fail

This setting specifies how your system should behave after a power fail or interrupts occurs. By choosing off will leave the computer in the power off state. Choosing On will reboot the computer. Former-Sts will restore the system to the status before power failure or interrupt occurs.
The Choices: **Off** (default), On, Former-Sts.

TF570 SLI A2+

7 PnP/PCI Configurations

This section describes configuring the PCI bus system. PCI, or Personal Computer Interconnect, is a system which allows I/O devices to operate at speeds nearing the speed of the CPU itself uses when communicating with its own special components. This section covers some very technical items and it is strongly recommended that only experienced users should make any changes to the default settings.

■ **Figure 7: PnP/PCI Configurations**

Phoenix - AwardBIOS CMOS Setup Utility		
PnP/PCI Configurations		
Init Display First	[PCIEx]	Item Help
Reset Configuration Data	[Disabled]	
Resources Controlled By	[Auto(ESCD)]	Menu Level ▶
x IRQ Resources	Press Enter	
PCI/VGA Palette Snoop	[Disabled]	
** PCI Express relative items **		
Maximum Payload Size	[4096]	
F5:Previous Values		F7: Optimized Defaults

Init Display First

This item allows you to decide to active whether PCI Slot or on-chip VGA first.
The Choices: PCIEx (default), PCI Slot.

Reset Configuration Data

The system BIOS supports the PnP feature which requires the system to record which resources are assigned and protects resources from conflict. Every peripheral device has a node, which is called ESCD. This node records which resources are assigned to it. The system needs to record and update ESCD to the memory locations. These locations are reserved in the system BIOS. If the Disabled (default) option is chosen, the system's ESCD will update only when the new configuration varies from the last one. If the Enabled option is chosen,

TF570 SLI A2+

the system is forced to update ESCDs and then is automatically set to the “Disabled” mode.

The above settings will be shown on the screen only if “Manual” is chosen for the resources controlled by function.

Legacy is the term, which signifies that a resource is assigned to the ISA Bus and provides non-PnP ISA add-on cards. PCI / ISA PnP signify that a resource is assigned to the PCI Bus or provides for ISA PnP add-on cards and peripherals.

The Choices: Disabled (default), Enabled.

Resources Controlled By

By Choosing “Auto(ESCD)” (default), the system BIOS will detect the system resources and automatically assign the relative IRQ and DMA channel for each peripheral. By Choosing “Manual”, the user will need to assign IRQ & DMA for add-on cards. Be sure that there are no IRQ/DMA and I/O port conflicts.

The Choices: Auto (ESCD) (default), Manual.

IRQ Resources

This submenu will allow you to assign each system interrupt a type, depending on the type of device using the interrupt. When you press the “Press Enter” tag, you will be directed to a submenu that will allow you to configure the system interrupts. This is only configurable when “Resources Controlled By” is set to “Manual”.

IRQ-5	assigned to PCI Device
IRQ-7	assigned to PCI Device
IRQ-9	assigned to PCI Device
IRQ-10	assigned to PCI Device
IRQ-11	assigned to PCI Device
IRQ-14	assigned to PCI Device

PCI / VGA Palette Snoop

Some old graphic controllers need to “snoop” on the VGA palette and then map it to their display as a way to provide boot information and VGA compatibility. This item allows such snooping to take place.

The Choices: Disabled (default), Enabled

Maximum Payload Size

Set the maximum payload size for Transaction packets (TLP).

The Choice: 4096 (default.), 128, 256, 512, 1024, 2048.

TF570 SLI A2+

8 PC Health Status

■ Figure 8: PC Health Status

Phoenix - AwardBIOS CMOS Setup Utility		
PC Health Status		
▶ Smart Fan Option	[Press Enter]	Item Help
Shutdown Temperature	[Disabled]	Menu Level ▶
Show H/W Monitor in POST	[Enabled]	
CPU Vcore		
Chipset Voltage		
+ 3.3 V		
+ 5.0 V		
+12.0 V		
DDR Voltage		
HT Voltage		
5V(SB)		
Voltage Battery		
CPU Temperature		
SYS Temperature		
CPU FAN Speed		
SYS FAN1 Speed		
SYS FAN2 Speed		
F5: Previous Values		F7: Optimized Defaults

Smart Fan Option

Phoenix - AwardBIOS CMOS Setup Utility		
Smart Fan Option		
CPU Smart Fan	[Disabled]	Item Help
x Smart Fan Calibration	Press Enter	Menu Level ▶
x PWM Duty Off(°C)	16	
x PWM Duty Start(°C)	30	
x Start PWM Value	32	
x Smart FAN Slope	64	
SYS Smart Fan1	[Disabled]	
x Smart Fan Calibration	Press Enter	
x PWM Duty Off(°C)	16	
x PWM Duty Start(°C)	30	
x Start PWM Value	32	
x Smart FAN Slope	64	
F5: Previous Values		F7: Optimized Defaults

TF570 SLI A2+

CPU Smart Fan

This item allows you to control the CPU Fan.

The Choices: Disabled (default), Auto, 4-pin, 3-pin..

SYS Smart Fan1

This item allows you to control the System Fan.

The Choices: Disabled (default), Auto.

Smart Fan Calibration

Choose this item and then the BIOS will auto test and detect the CPU/System fan functions and show CPU/System fan speed.

PWM Duty Off<°C>

If the CPU/System Temperature is lower than the set value, FAN will turn off.

The Choices: Min=0,.Max=127, Key in a DEC number.

PWM Duty Start<°C>

CPU/System fan starts to work under smart fan function when arrive this set value.

The Choices: Min=0,.Max=127, Key in a DEC number.

Start PWM Value

When CPU/System temperature arrives to the set value, the CPU/System fan will work under Smart Fan Function mode. The range is from 0~127, with an interval of 1.

The Choices: Min=0,.Max=127, Key in a DEC number.

Smart Fan Slope

Increasing the value of slope PWM will raise the speed of CPU/System fan.

The Choices: Min=1,.Max=127, Key in a DEC number.

Shutdown Temperature

This item allows you to set up the CPU shutdown Temperature. This item is only effective under Windows 98 ACPI mode.

The Choices: Disabled(default) , 60°C/140°F, 65°C/149°F, 70°C/158°F, 75°C/167°F, 80°C/176°F, 85°C/185°F, 90°C/194°F .

Show H/W Monitor in POST

If your computer contains a monitoring system, it will show PC health status during POST stage. The item offers several different delay times.

The Choices: Enabled (default), Disabled.

TF570 SLI A2+

CPU Vcore, Chipset Volt, +3.3V, +5.0V, +12.0V, DDR Voltage, HT Voltage, 5V<SB>, Voltage Battery

Detect the system's voltage status automatically.

CPU Temperature

This field displays the current temperature of CPU.

SYS Temperature

This field displays the current temperature of SYSTEM.

CPU FAN Speed

This field displays the current speed of CPU fan.

SYS FAN1 Speed


This field displays the current speed SYSTEM fan.

SYS FAN2 Speed

This field displays the current speed SYSTEM fan.

TF570 SLI A2+

9 OverClock Navigator Engine

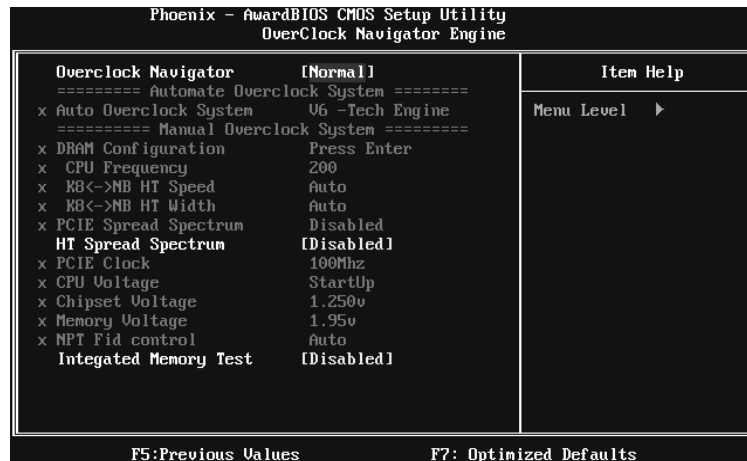

OverClock Navigator

OverClock .Navigator is designed for beginners in overclock field. Based on many test and experiments from Biostar Engineer Team, OverClock Navigator provides 3 default overclock configurations that are able to raise the system performance

The Choices: Normal (default), Automate Overclock, Manual Overclock

TF570 SLI A2+

Auto OverClock System

Phoenix - AwardBIOS CMOS Setup Utility OverClock Navigator Engine		
Overclock Navigator [Automate Overclock]		Item Help
===== Automate Overclock System =====		
Auto Overclock System [V6 -Tech Engine]		Menu Level ▶
===== Manual Overclock System =====		
x DRAM Configuration	Press Enter	
x CPU Frequency	200	
x KB<->NB HT Speed	Auto	
x KB<->NB HT Width	Auto	
x PCIE Spread Spectrum	Disabled	
HT Spread Spectrum	[Disabled]	
x PCIE Clock	100Mhz	
x CPU Voltage	StartUp	
x Chipset Voltage	1.250v	
x Memory Voltage	1.95v	
x NPT Fid control	Auto	
Integrated Memory Test	[Disabled]	
F5: Previous Values		F7: Optimized Defaults

The Overclock Navigator provides 3 different engines helping you to overclock your system. These engines will boost your system performance to different level.

The Choices:

V6 Tech Engine

This setting will raise about 5%~10% of whole system performance.

V8 Tech Engine

This setting will raise about 15%~25% of whole system performance.

V12 Tech Engine


This setting will raise about 25%~30% of whole system performance.

Cautions:

1. Not every AMD CPU performs the above overclock setting ideally; the difference may vary with the installed CPU model.
2. From BET experiment, the Atholon64 FX CPU is not suitable for this A.O.S. feature.

TF570 SLI A2+

Manual Overclock System (M.O.S.)

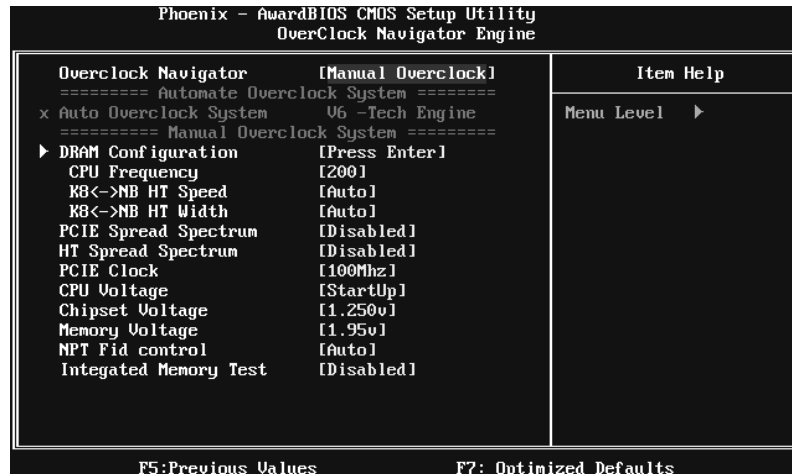


MOS is designed for experienced overclock users.

It allows users to customize personal overclock setting.

Note:

Based on our test results; the overclock function achieved the best performance on AMD 3000+ CPU

DRAM Configuration

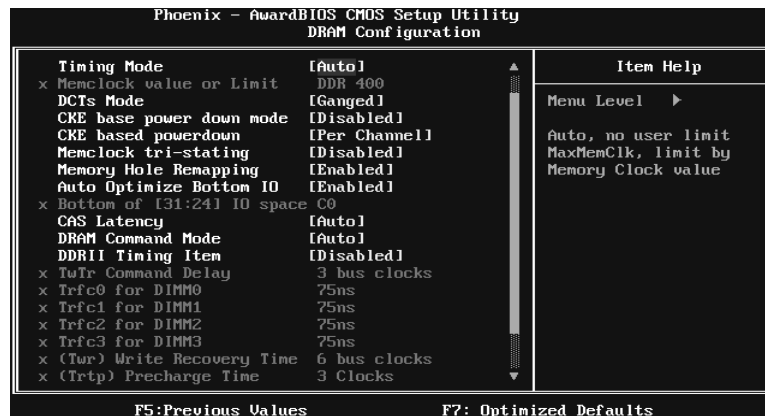

TF570 SLI A2+

Timing Mode

This item allows you to choose to manually or automatically regulate the DDR Timing.

The Choices: **Auto** (default), MaxMemClk.

Memory Clock Value OR Limi

The Choices: **DDR 400** (default), DDR 533, DDR 667, DDR 800.

DCTs Mode

The Choices: Unganged, **Ganged** (default).

CKE base power down mode

The Choices: **Disabled** (default), Enabled.

CKE based power down

The Choices: **Per Channel** (default), Per CS.

Memclock tri-stating

The Choices: **Disabled** (default), Enabled.

Memory Hole Remapping

The Choices: **Enabled** (default), Disabled.

Auto Optimize Bottom IO

The Choices: **Enabled** (default), Disabled.

Bottom of [31:24] IO space

The Choices: **C0** (default); Min=0000, Max=00FF, key in a HEX number.

CAS Latency

The Choices: **Auto** (default), 2.0, 3.0, 4.0, 5.0, 6.0.

DRAM Command Mode

The Choices: **Auto** (default), 1T, 2T.

DDRII Timing Item

The Choices: **Disabled** (default), Enabled.

TF570 SLI A2+

TwTr Command Delay

The Choices: **3 bus clocks** (default), 1 bus clocks, 2 bus clocks.

Trfc0 for DIMM0

The Choices: **75ns** (default), 105ns, 127.5ns, 195ns, 327.5ns.

Trfc1 for DIMM1

The Choices: **75ns** (default) , 105ns, 127.5ns, 195ns, 327.5ns.

Trfc2 for DIMM2

The Choices: **75ns** (default) , 105ns, 127.5ns, 195ns, 327.5ns.

Trfc3 for DIMM3

The Choices: **75ns** (default) , 105ns, 127.5ns, 195ns, 327.5ns.

<Twr> Write Recovery Time

The Choices: **6 bus clocks** (default), 3 bus clocks, 4 bus clocks, 5 bus clocks.

<Trtp> Precharge Time

The Choices: **3 clocks** (default), 2 clocks.

<Trc> Row Cycle Time

The Choices: **26 bus clocks** (default), 11-25 bus clocks.

<Trcd> RAS to CAS R/W Delay

The Choices: **6 clocks** (default), 3 clocks, 4 clocks, 5 clocks.

<Trrd> RAS to RAS Delay

The Choices: **5 clocks** (default), 2 clocks, 3 clocks, 4 clocks.

<Trp> Row Precharge Time

The Choices: **6 clocks** (default), 3 clocks, 4 clocks, 5 clocks.

<Tras> Minimum RAS Active T

The Choices: **18 bus clocks** (default), 5-17 bus clocks.

TF570 SLI A2+

CPU Frequency

This item allows you to select the CPU Frequency.
The Choices: 200 (default), 200~450.

K8<->NB HT Speed

The Choices: AUTO (default), 1x, 2x, 3x, 4x, 5x.

K8<->NB HT Width

The Choices: AUTO (default), ↓8↑8, ↓16↑16.

PCIE Spread Spectrum

This item allows you to select the PCIE Spread Spectrum function.
The Choices: Disabled (default), Enabled.

HT Spread Spectrum

This item allows you to select HT Spread Spectrum function.
The Choices: Disabled (default), Center, Down.

PCIE Clock

This item allows you to select the PCIE clock.
The Choices: 100Mhz (default), 101Mhz~150Mhz.

CPU Voltage

This item allows you to select CPU Voltage Control.
The Choices: StartUp (default), +0.012V ~ +0.787V

Chipset Voltage

This function allows you to adjust the chipset voltage.
The Choices: 1.250V (default), 1.250v~1.600v with an interval of 0.025v, 1.650v.

TF570 SLI A2+

Memory Voltage

This function allows you to adjust the DDR voltage.

The Choices: **1.95V** (default), 2.00V, 2.05V, 2.10V, 2.20V, 2.30V, 2.40V, 2.50V, 2.60V, 2.70V, 2.90V, 3.10V, 3.30V.

NPT Fid control

This function allows you to adjust the frequency ratio of CPU.

The Choices: **Auto** (default), x4: 800Mhz ~ x25: 5000Mhz
(differs from CPU)


TF570 SLI A2+

Integrated Memory Test

Integrated Memory Test allows users to test memory module compatibilities without additional device or software.


Step 1:

This item is disabled on default; change it to “Enable” to precede memory test.

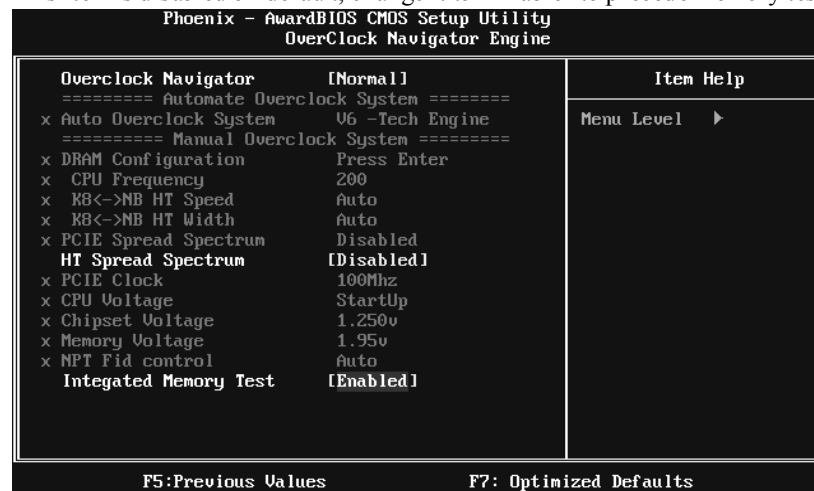

Step 2:

When the process is done, change the setting back from “Enabled” to “Disabled” to complete the test.

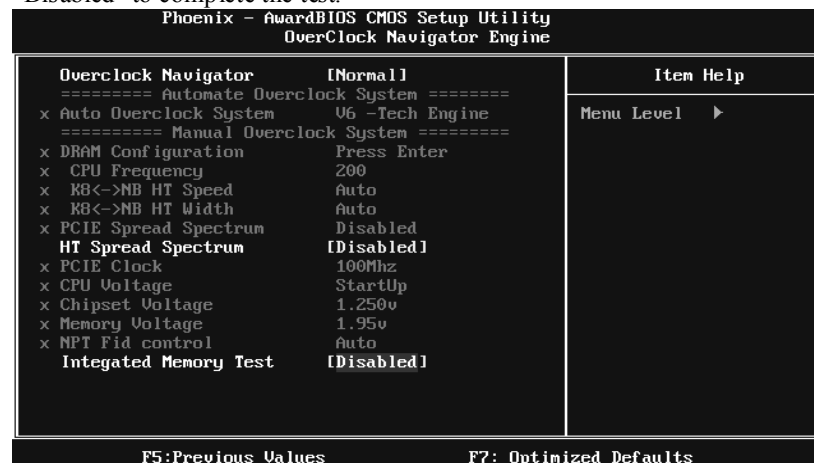

10 CMOS Reload Program (C.R.P.)

Phoenix - AwardBIOS CMOS Setup Utility		
CMOS Reload Program		
Save Selection as	[Press Enter]	Item Help
Reload Selection from	[Press Enter]	Menu Level ▶
<p>F5: Previous Values</p> <p>F7: Optimized Defaults</p>		